

---

# ATI Remote Wonder Installation Instructions



## **Disclaimer**

The manufacturer (MFR) reserves the right to make changes to this document and the products which it describes without notice. The MFR shall not be liable for technical or editorial errors or omissions made herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

© Copyright 2002, by ATI Technologies Inc.

All rights reserved, including those to reproduce this guide or parts thereof, in any form without the express written permission of ATI Technologies Inc.

Features and specifications are subject to change without notice. Trademarks and/or registered trademarks are the properties of their respective owners:

ALL-IN-WONDER – ATI Technologies Inc.;  
Windows – Microsoft Corp.

## ATI Remote Wonder Installation Instructions

Control TV, DVD, and video features of your ALL-IN-WONDER® family product. The Remote Wonder unit replaces all the functionality of a mouse in software applications.












 

 








### To install your Remote Wonder unit

- 1 Open the battery container on the back of the remote control, and insert 4, AAA batteries.
- 2 Install your ATI Multimedia Center software, then restart your computer.
- 3 Plug the remote receiver into any available USB port on your computer. Your computer will detect the receiver, and will install the driver.
- 4 When the driver has been installed, restart your computer. The ATI Remote Wonder icon will appear on the Windows taskbar.



The following table lists all the Remote Wonder functions.

Button	Feature					
	TV	DVD	Video CD	File Player	CD Audio	Windows
	The thumbpad controls cursor movement in all modes.					
<b>POWER</b>	Power Off			Alt+F4		
<b>TV</b>	Focus on TV	Launch TV				
<b>DVD</b>	Launch DVD	Focus on DVD	Launch DVD			
<b>WEB</b>	Launch Browser					
	Launch Media Library					
	Maximize/restore the foreground window, if applicable.					
	Increase/decrease volume					Increase/decrease volume*
	Channel up/down	no action				
<b>MUTE</b>	Toggle mute				Toggle mute*	
<b>0 - 9</b>	Numeric keys					
	no action	Open root menu	no action			
	Open Setup menu					no action

Button	Feature					
	TV	DVD	Video CD	File Player	CD Audio	Windows
	Up arrow key					
	Down arrow key					
	Right arrow key					
	Left arrow key					
	Press Enter	Enter / navigation select	Press Enter			
	Play in TV-On-Demand mode	Play				Play*
	Enter TV-On-Demand mode	Pause				Pause*
	Exit TV-On-Demand mode	Stop				Stop*
	Rewind in TV-On-Demand mode	Rewind				Skip to previous track*
	Fast-forward in TV-On-Demand mode	Fast-forward				Skip to next track*
	Record	no action				
	Drag (toggles holding down the left mouse button)					
A, B, C, D, E, F	Programmable buttons. To program the buttons, right-click the ATI Remote Wonder icon in the system tray.					
	Toggle TV-On-Demand mode	no action				

\*This function is only supported by Windows applications that respond to WM\_APPCOMMAND

**Note:** The Remote Wonder's range is subject to conditions: 30 feet is not guaranteed for all users in all environments. For best results, the receiver should be placed as far as possible from the computer's case and monitor.