



## System Requirements

<b>Hardware</b>	<ul style="list-style-type: none"><li>• Intel® Pentium® 4 or equivalent with USB port.</li><li>• CD-ROM drive (for installation software).</li></ul>
<b>Operating System</b>	<ul style="list-style-type: none"><li>• Windows® XP (Home or Pro).</li></ul>

## Install your REMOTE WONDER™ PLUS

- 1 Open the battery container on the back of the REMOTE WONDER™ PLUS, and then insert two AAA batteries.
- 2 Insert the included *ATI Installation CD* into your CD-ROM drive.
- 3 Click the REMOTE WONDER™ icon on the ATI CD Install screen. Follow the on-screen instructions, and then allow the computer to restart.
- 4 Plug the remote receiver into any available USB port on your computer. The REMOTE WONDER™ PLUS icon will appear on the Windows taskbar.

The REMOTE WONDER™ PLUS range depends upon the environment. For best results, the receiver should be placed as far as possible from the computer's case and monitor.

## Product Registration

To receive Customer Service you must register your product with ATI within 30 days of purchase. An Online Product Warranty Registration form is available at:

[ati.com/online/registration](http://ati.com/online/registration)

## Warranty Service


For warranty information, limitations and service instructions visit:

[ati.com/online/warranty](http://ati.com/online/warranty) or contact one of our Customer Service Representatives using one of the aforementioned means

## REMOTE WONDER™ PLUS Installation and User Guide



Button	Cyberlink PowerCinema - ATI Edition
1	Programmable buttons A - F. To program the buttons, right-click the REMOTE WONDER™ PLUS icon in the system tray.
2	Activate TV
3	Start FM
4	Maximize / Restore the foreground window if possible.
5	Thumbpad controls cursor movement in all modes.
6	Left mouse button
7	Increase / Decrease volume
8	Rewind TV/Video
9	Record TV
10	Not Used
11	Up / Down / Left / Right arrows
12	Enter
13	Number Pad
14	Not Used

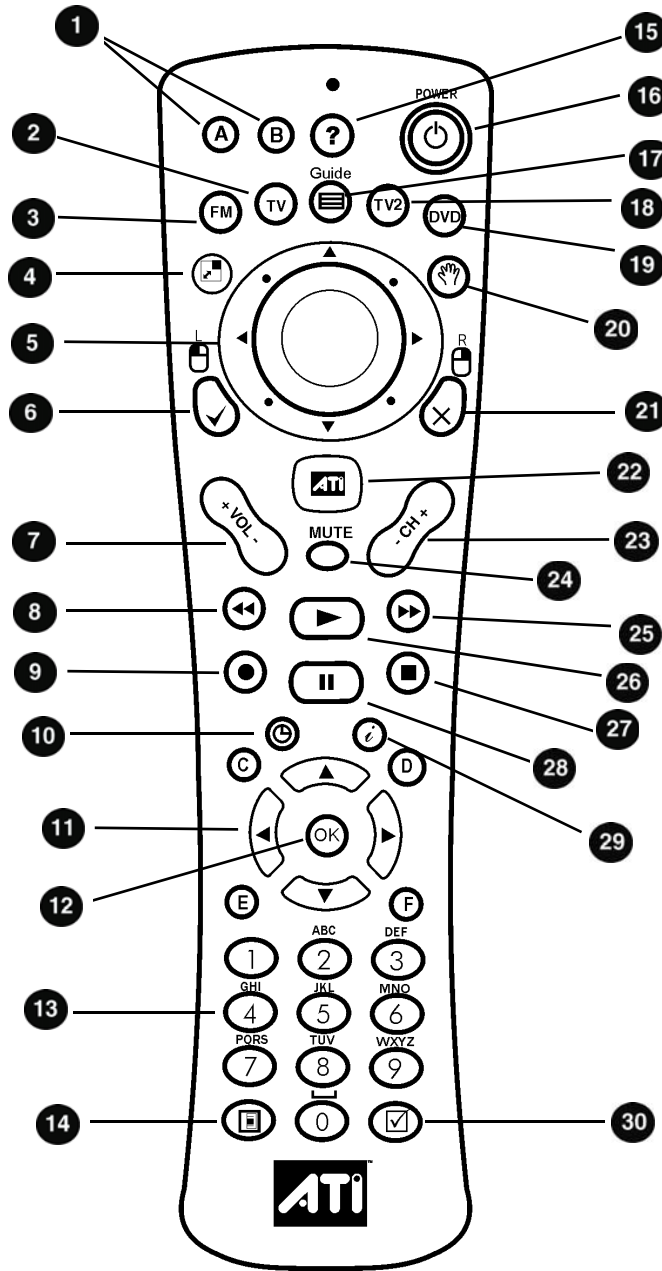

Button	Cyberlink PowerCinema - ATI Edition
15	Display Help
16	Power Off
17	Not Used
18	Not Used
19	Launch system default DVD player
20	Not Used
21	Right mouse button
22	Go To Main Menu
23	Channel Up / Down
24	Toggle Audio Mute
25	Fast-forward TV/Video
26	Play TV/Video
27	Stop Video Playback
28	Pause TV/Video
29	Not Used
30	Open Setup Menu



## System Requirements

<b>Hardware</b>	<ul style="list-style-type: none"><li>• Intel® Pentium® 4 or equivalent with USB port.</li><li>• CD-ROM drive (for installation software).</li></ul>
<b>Operating System</b>	<ul style="list-style-type: none"><li>• Windows® XP (Home or Pro).</li></ul>

## Install your REMOTE WONDER™ PLUS

- 1 Open the battery container on the back of the REMOTE WONDER™ PLUS, and then insert two AAA batteries.
- 2 Insert the included *ATI Installation CD* into your CD-ROM drive.
- 3 Click the REMOTE WONDER™ icon on the ATI CD Install screen. Follow the on-screen instructions, and then allow the computer to restart.
- 4 Plug the remote receiver into any available USB port on your computer. The REMOTE WONDER™ PLUS icon will appear on the Windows taskbar.

The REMOTE WONDER™ PLUS range depends upon the environment. For best results, the receiver should be placed as far as possible from the computer's case and monitor.

## Product Registration

To receive Customer Service you must register your product with ATI within 30 days of purchase. An Online Product Warranty Registration form is available at:

[ati.com/online/registration](http://ati.com/online/registration)

## Warranty Service


For warranty information, limitations and service instructions visit:

[ati.com/online/warranty](http://ati.com/online/warranty) or contact one of our Customer Service Representatives using one of the aforementioned means

## REMOTE WONDER™ PLUS Installation and User Guide



Button	Cyberlink PowerCinema - ATI Edition
1	Programmable buttons A - F. To program the buttons, right-click the REMOTE WONDER™ PLUS icon in the system tray.
2	Activate TV
3	Start FM
4	Maximize / Restore the foreground window if possible.
5	Thumbpad controls cursor movement in all modes.
6	Left mouse button
7	Increase / Decrease volume
8	Rewind TV/Video
9	Record TV
10	Not Used
11	Up / Down / Left / Right arrows
12	Enter
13	Number Pad
14	Not Used

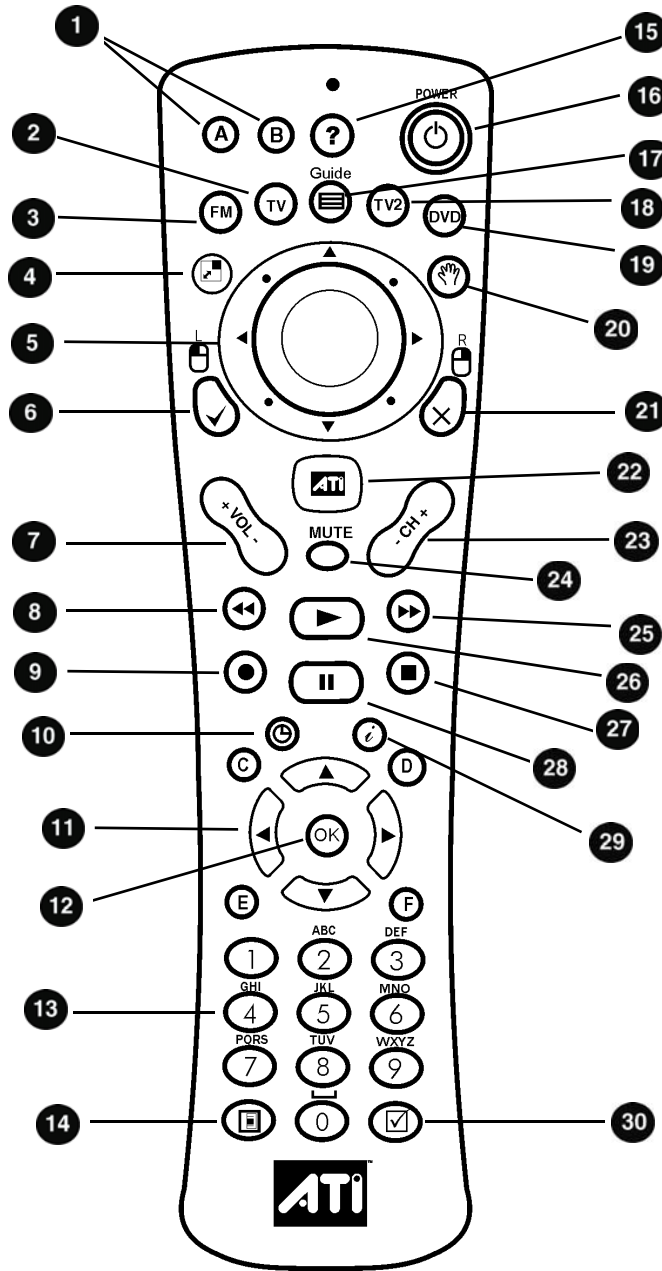

Button	Cyberlink PowerCinema - ATI Edition
15	Display Help
16	Power Off
17	Not Used
18	Not Used
19	Launch system default DVD player
20	Not Used
21	Right mouse button
22	Go To Main Menu
23	Channel Up / Down
24	Toggle Audio Mute
25	Fast-forward TV/Video
26	Play TV/Video
27	Stop Video Playback
28	Pause TV/Video
29	Not Used
30	Open Setup Menu